



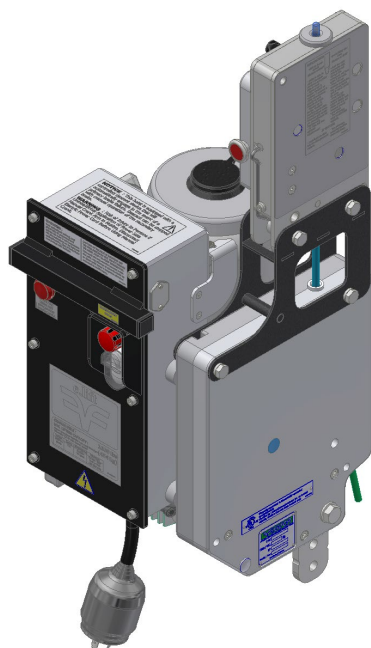
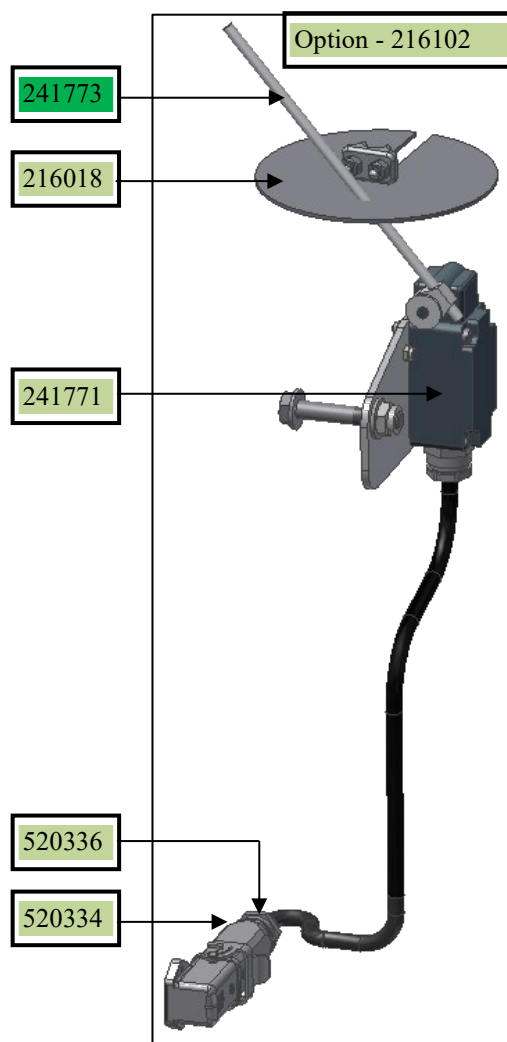
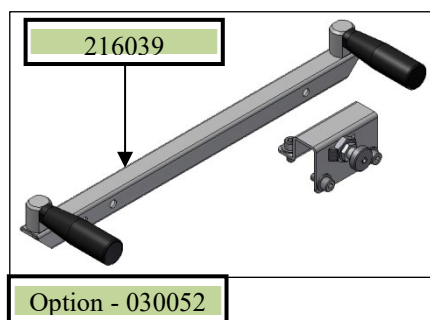
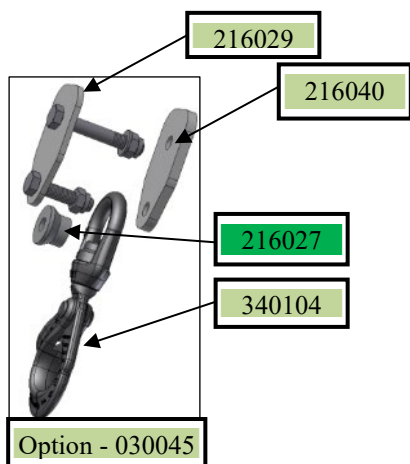
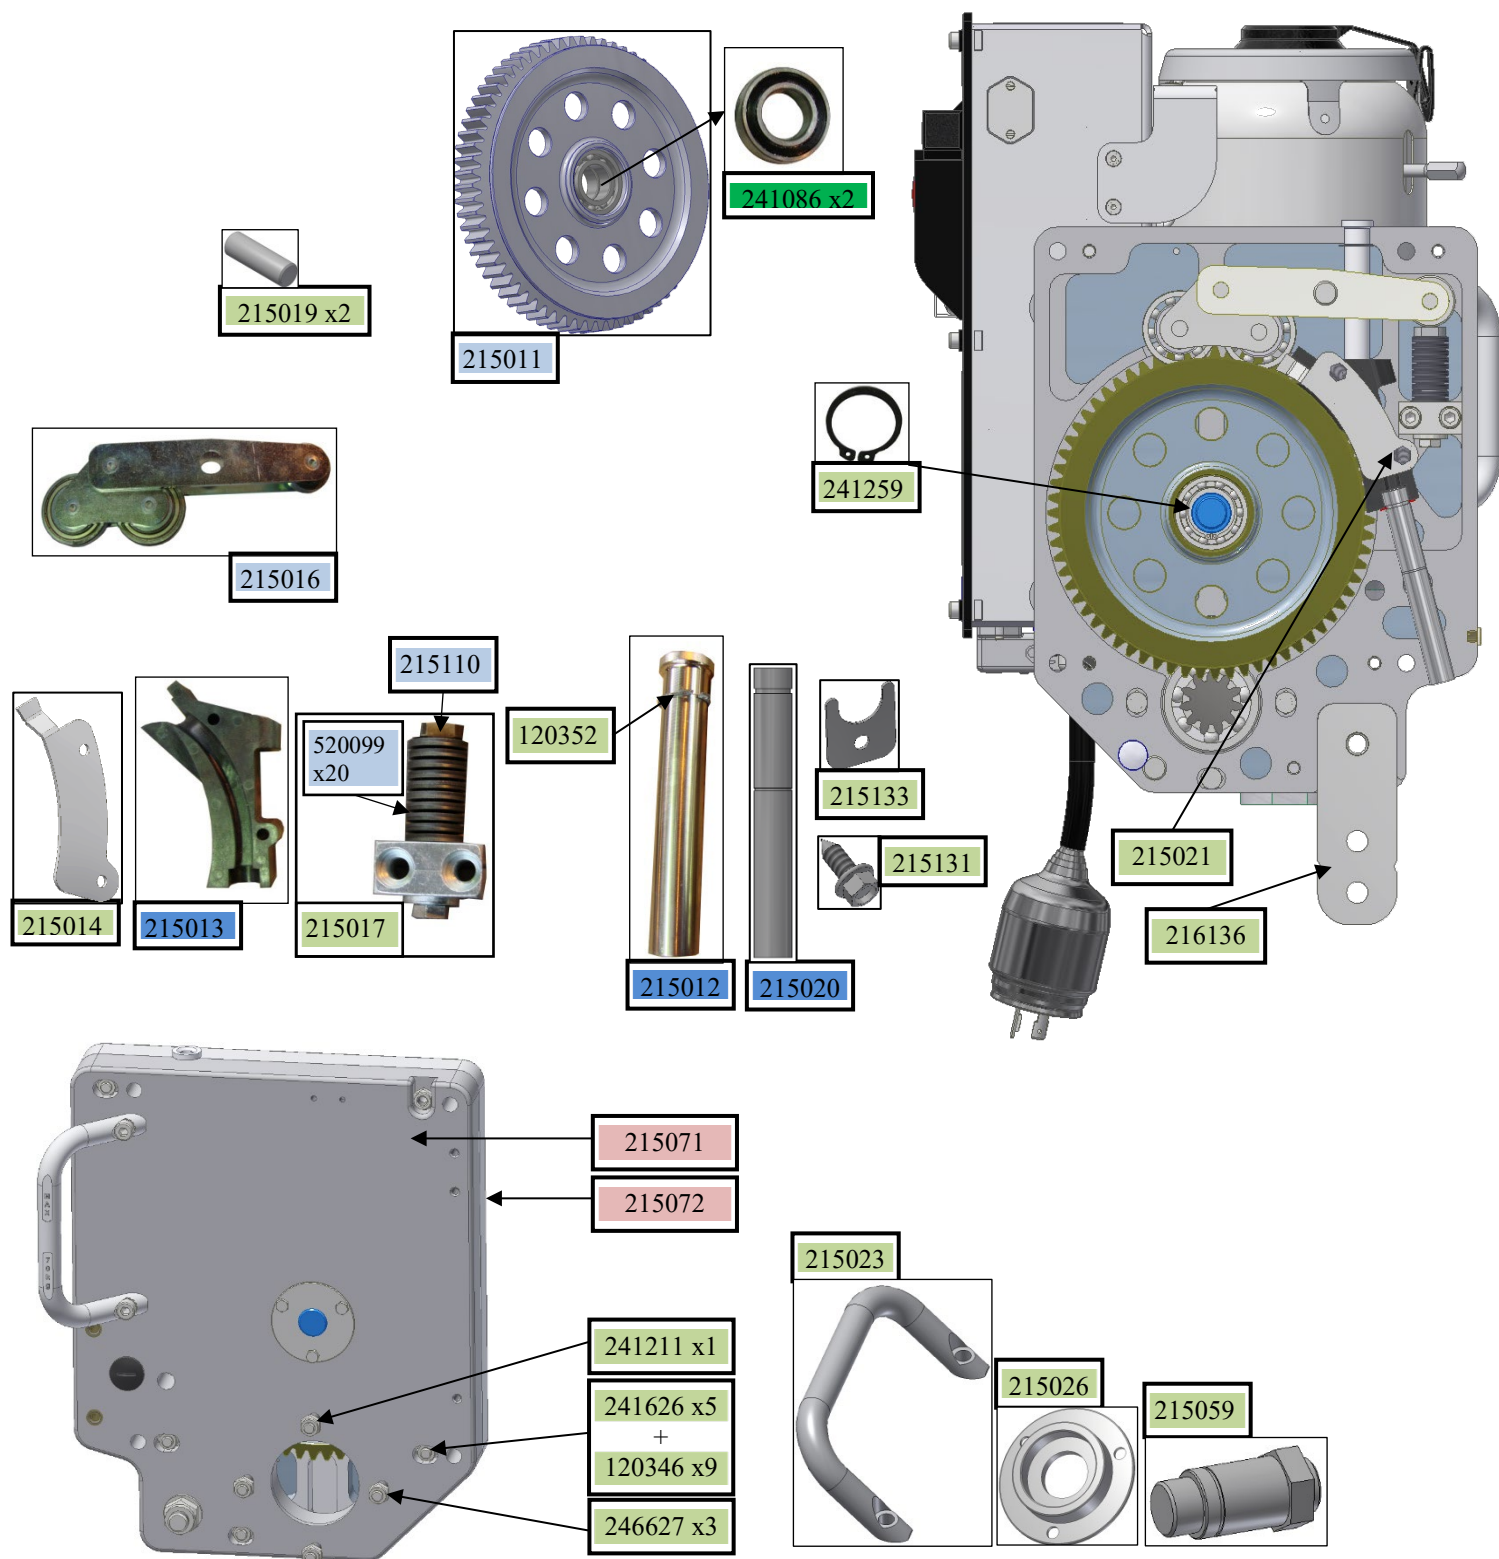
 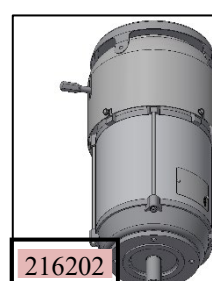
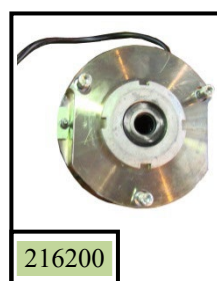
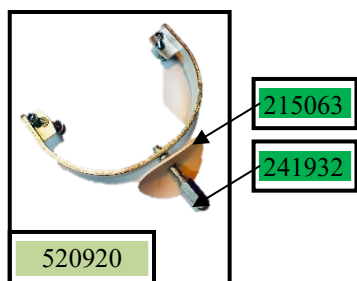
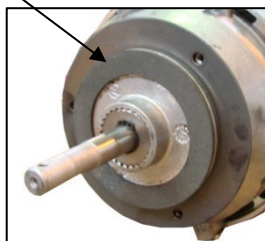

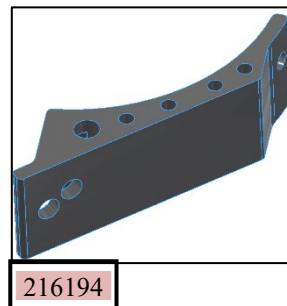


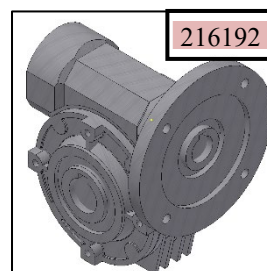


	WEAR PARTS (*) WITH HIGH CHANGE FREQUENCY
	WEAR PARTS (*) WITH LOW CHANGE FREQUENCY
	SPARE PARTS WITH HIGH PROBABILITY OF REPLACEMENT
	SPARE PARTS WITH LOW CHANGE FREQUENCY
	REPAIR PARTS
(*) Wear parts are those in movement, friction or in contact with wire ropes.	

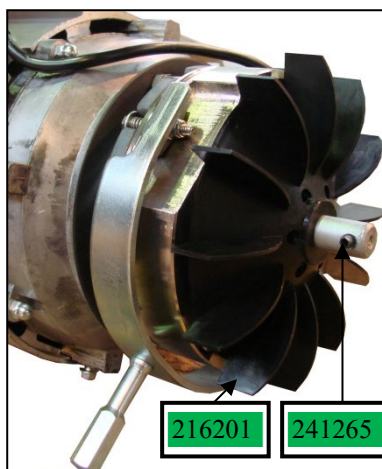

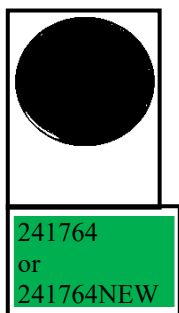


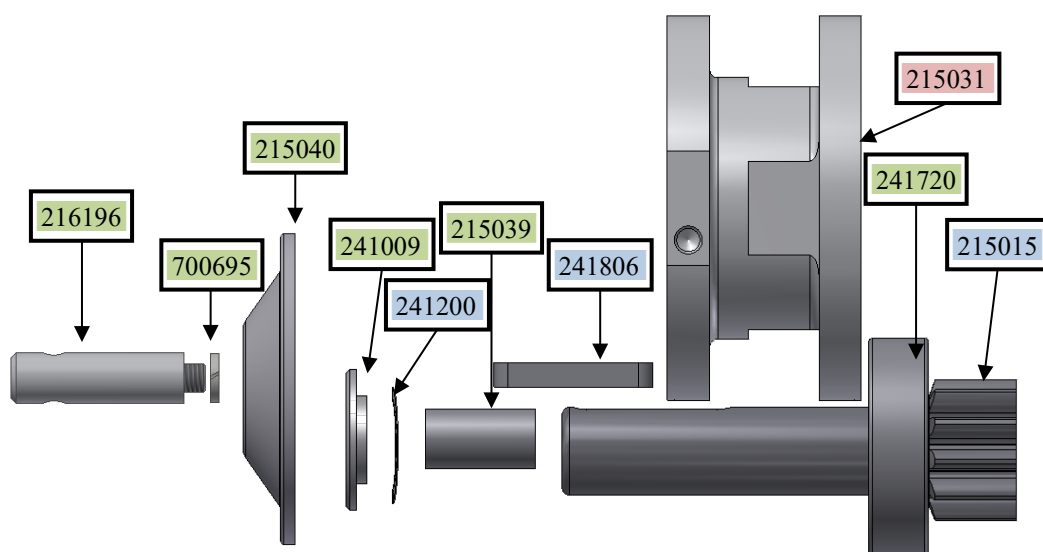


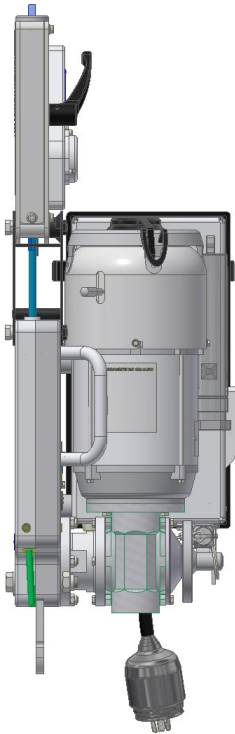

244540



216132

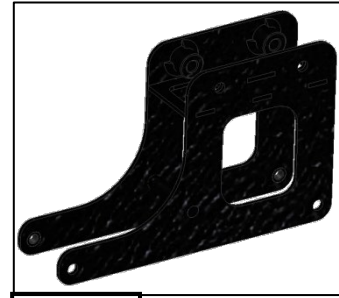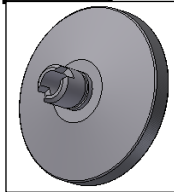

216195

**EMERGENCY
STOP**
1714527233

216091



216108

NOTICE: This hoist is equipped with a controlled descent device that will automatically engage in the event of a primary brake failure. Descent can be stopped with manual operation of the secondary brake.
WARNING: Risk of Injury to Persons if Unintentional Application of Power Sets Manual Crank Arm in Motion. Disconnect Electric Power Cord Before Using Manual Crank.



216104

WARNING :

Only authorized trained and physically fit personnel shall operate this hoist in strict accordance with the instructions on the hoist and applicable codes. Copy of instructions must be kept with the hoist.

CAUTION: IF THE MOTOR ENERGIZES BUT THE WIRE ROPE DOES NOT MOVE THROUGH THE HOIST, STOP THE HOIST IMMEDIATELY. Damaged wire rope may be jammed inside the hoist. Any attempt to move the hoist up or down could cause a dangerous situation and result in bodily injury.

1714527257

216105

CHARGE UTILE : 1000 lbs
MAX. LIFTING CAPACITY : (454 kg)

Moteur monophasé 0,88 kW avec sonde thermique (3Ph motor 1,2 HP with thermal probe)

Voltage	Current	Travel Speed	Wire Rope
208V-1~ 60 Hz	8 A	9 m/min 30 ft/min	8.3 mm - 5/16" 5x19 or 5x26 with fiber core

1714529671

1000lbs 1~ : 216168

241802

**EMERGENCY DESCENT
DESCENTE DE SECOURS
NOTABLAß
DESCENSO DE SEGURIDAD**

Only in case of power failure. Push and keep the lever up.

To raise:
- Take off cap.
- Put hand-wheel.
- Rise up the lever and turn in the hand-wheel.

Nur bei Stromausfall benutzen. Zum Ablassen Hebel nach oben drücken.

Zum Heben:
- den Deckel am Motor öffnen.
- Das Handrad aufsetzen.
- Den Hebel heben und das Handrad drehen.






Uniquement en cas de panne de courant. Pousser et maintenir le levier vers le haut.


Pour monter:
- Enlever le bouchon.
- Mettre le volant.
- Lever le levier et tourner le volant.

Unicamente en caso de corte de corriente. Presione y mantenga la palanca hacia arriba.



Para subir:
- Levante el gancho.
- Introduzca el volante.
- Pulse y gire el volante.

1714529471

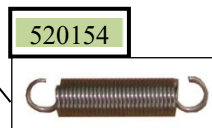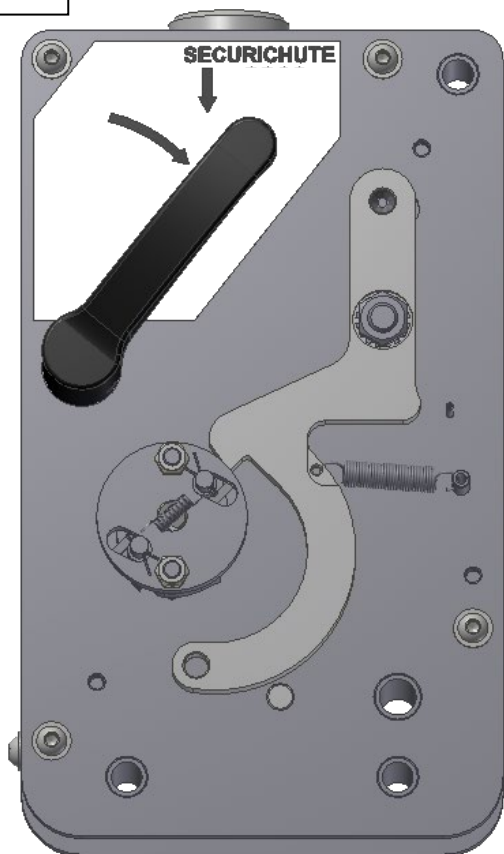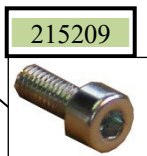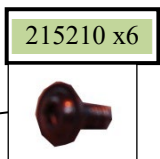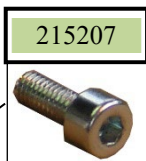


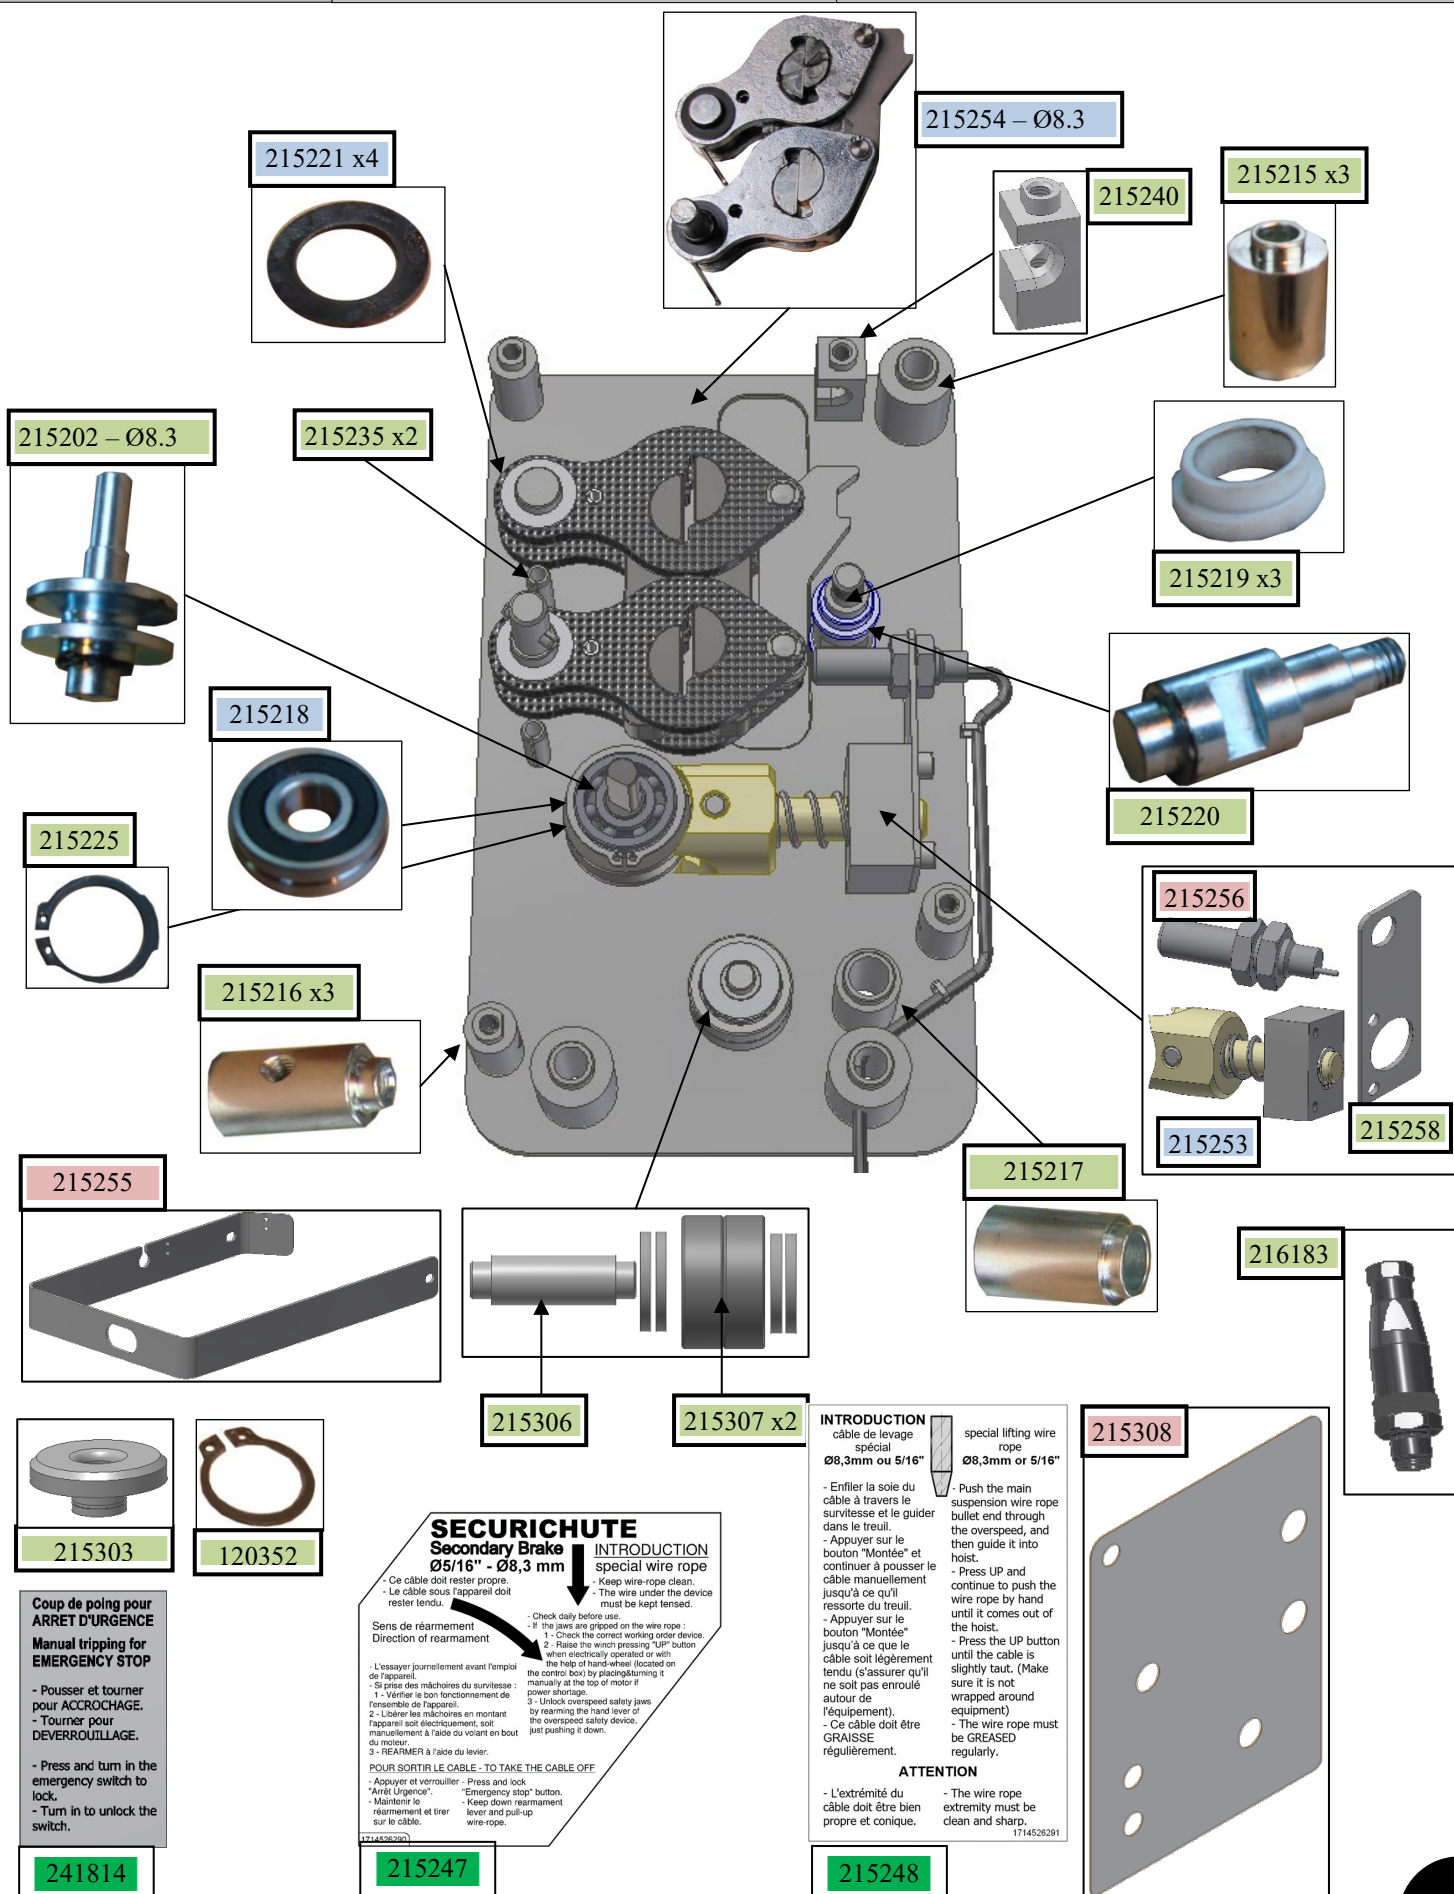


SECONDARY WIRE ROPE OPTION (215331)

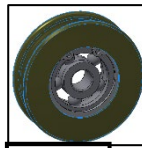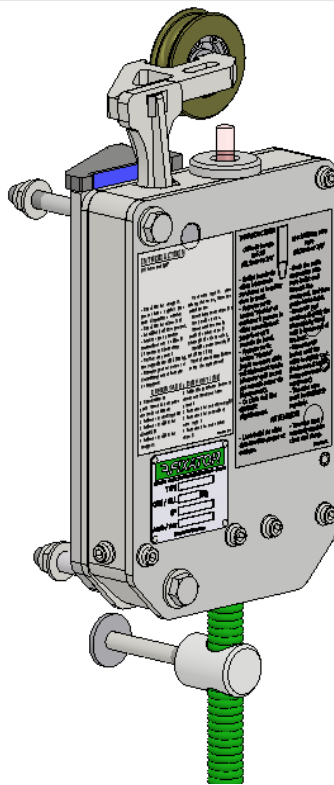

518502

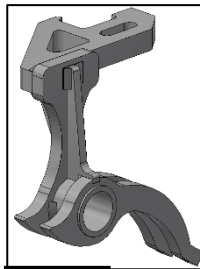


215322

 


215236 - M5x16
215237 - M4x5
215249 - M8x16



 
215325 x2




215239

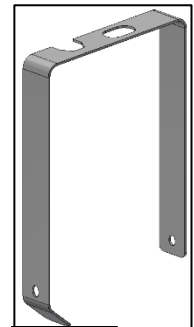


215324

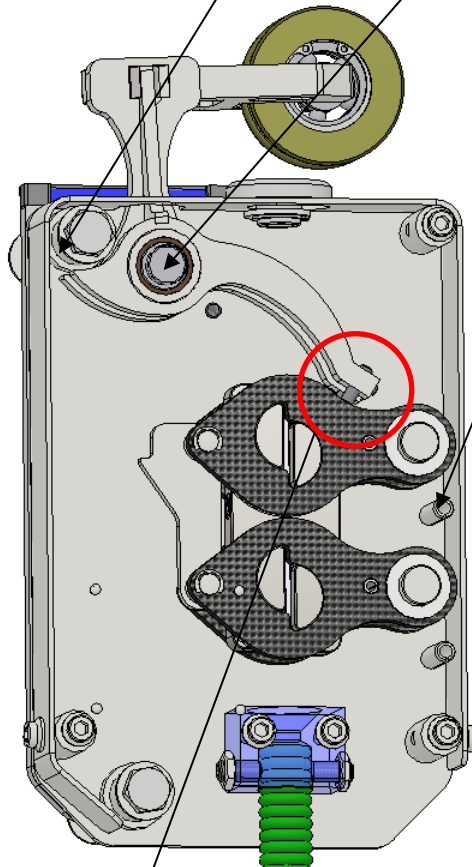


215251 x2

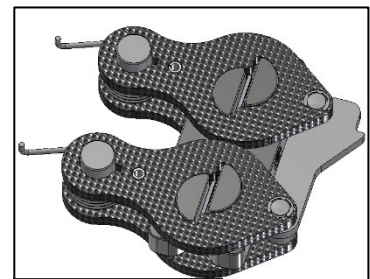


215231 - Ø8.3

 

215327

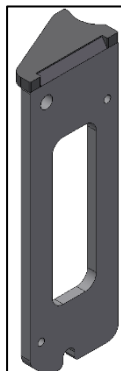


215323

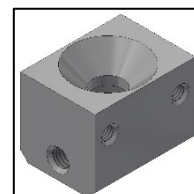


215238



215250

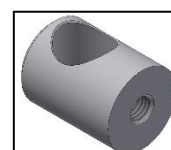

215326

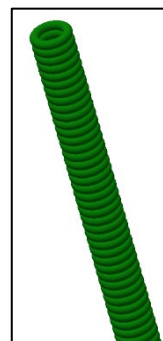

215328

INTRODUCTION
Ø9,5mm ou 3/8"



- Du câble de levage **A** : passer dans le galet, puis voir l'étiquette ci-contre.
- Du câble de sécurité **B** : Le câble doit être propre.
- Insérer puis pousser manuellement le câble **B** à travers le Securistop.
- Mettre en place 1 contrepois de 20 à 30 kg. of 20 to 30 kg.
- Essayer journalièrement le Securistop avant l'emploi de l'appareil.
- Main wire rope **A** : pass along the roller, then see label below.
- Secondary wire rope **B** : Keep cable clean.
- Insert and manually push the wire rope **B** through the Securistop.
- Install a counterweight of 20 to 30 kg.
- Test it every day before using the equipment.


- DEMONTAGE / DISMANTLING**
- 1-Descendre la plate-forme à quelques centimètres du sol
 - 2-Enlever le contrepois
 - 3-Enlever le câble de sécurité **B**
 - 4-Enlever le câble de levage **A**
 - 1-Take the platform down to some centimeters from ground
 - 2-Remove the counterweight
 - 3-Remove the secondary wire rope **B**
 - 4-Remove the main wire rope **A**



215252




2200≠1250

2200lbs Ø9.5 : R=6
1250lbs Ø8.3 : R=8

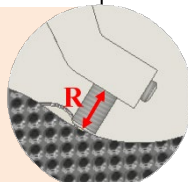

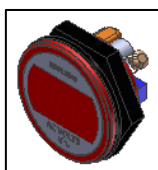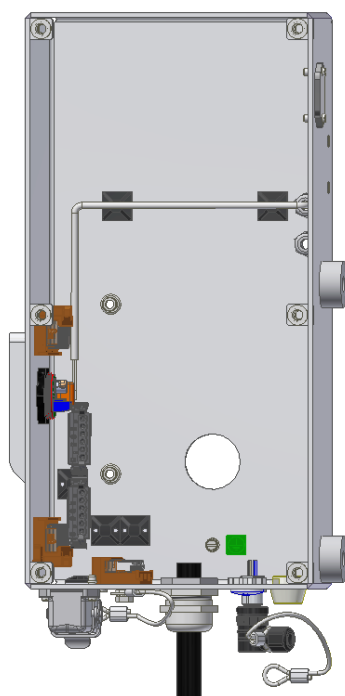


216078

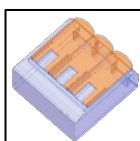


215034



216199

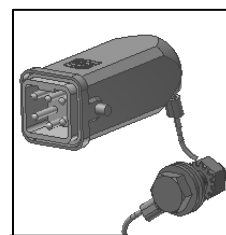


216075

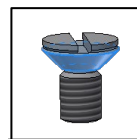


M3x6+seal
216133




216181

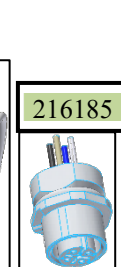


216185

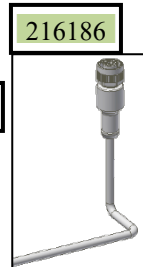

216186

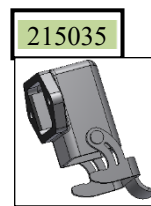

215035

 


215038




215209 x6

216187 (1~)

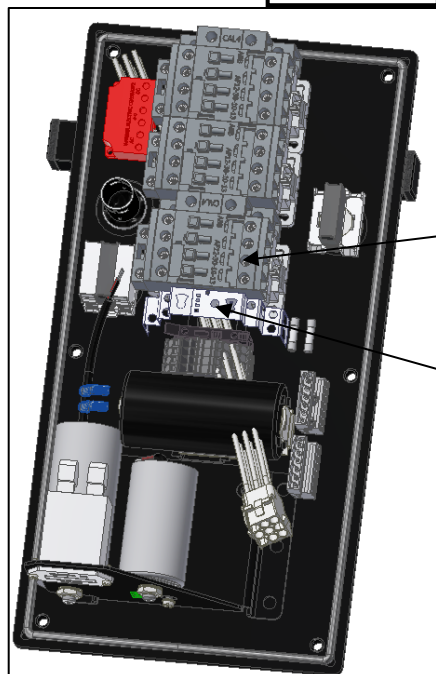

(1~) 215093=2x244076 + 2x215055

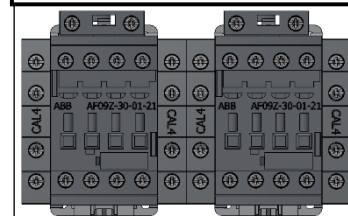


20μF : 520220
30μF : 520219
100μF : 241202




244076

 216189
(setting :
2s / 10)



241937

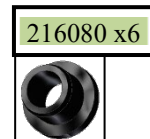


216080 x6

1.0A – 5x20 : 216190



216188

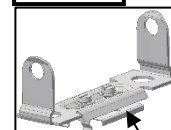

244087



216081




216082



216083



216191

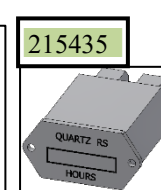

215435

120346	HEXAGONAL NYLOCK NUT M8
120352	EXTERNAL SNAP RING - Ø16
130262	SPRING DOWEL PIN (02.50x015)
215011	SUBSET PULLEY GROOVE Ø8.3
215012	WIRE ROPE ENTRANCE TUBE 526
215013	GUIDING DEVICE FOR WIRE ROPE CROSSING
215014	WIRE ROPE GUIDING PLATE
215015	PINION SHAFT 526
215016	SUBSET PRESSURE SYSTEM COMPLETE 526
215017	SUBSET PRESSURE SPRING WASHERS ASSEMBLY 526
215019	PRESSURE SYSTEM SHAFT
215020	WIRE ROPE EXIT TUBE 526
215021	HEXAGONAL SCREW (06x35)
215023	HOIST CARRYING HANDLE 526
215026	DYNAMOMETRIC AXLE FIXING PLATE 526
215031	GEARBOX FLANGE 526
215034	3 POLE LEVER TERMINAL BLOCK
215035	5-PIN ANGLED SURFACE-MOUNT SUBBASE + LOCK
215038	CONDENSATION DRAIN PLUG
215039	PINION SHAFT SPACER
215040	SHAFT COVER 526
215055	AUXILARY CONTACT 1NO+1NC
215059	PULLEY GROOVE SHAFT
215063	RUBBER WASHER FOR BRAKE LEVER
215071	CASING BASE
215072	CASING COVER
215093	DOUBLE CONTACTOR 3-PHASE 48V
215110	PRESSURE SPRING WASHERS AXLE 526
215131	SELF-TAPPING SCREW (04.8x013)
215133	EXIT CABLE TUBE FIXING BRACKET 526I
215202	PRESSURE WHEEL - 8.3mm - "SECURICHUTE" 526
215204	"SECURICHUTE" RESET HANDLE 526
215205	SUBSET OVERSPEED FLYWEIGHTS COVER
215206	"SECURICHUTE" OVERSPEED HOUSING 526
215207	SOCKET HEAD CAP SCREW (004x010)
215209	SOCKET HEAD CAP SCREW (06x020)
215210	FLANGE BUTTON HEAD SOCKET CAP SCREW (006x012)
215212	SUBSET OVERSPEED FLYWEIGHTS 526
215213	HEXAGONAL NUT M10
215215	UPPER MOUNTING SPACER 526
215216	PLATE SPACER FOR "SECURICHUTE" 526
215217	LOWER MOUNTING SPACER 526
215218	PRESSURE WHEEL BALL BEARING WITH GROOVE 526
215219	"SECURICHUTE" PIVOT PLASTIC BEARING 526
215220	TRIGGERING LEVER PIVOT "SECURICHUTE" 526

215221	JAWS AXLE PLASTIC WASHER 526
215224	"SECURICHUTE" MANUAL TRIGGERING - EMERGENCY STOP
215225	EXTERNAL SNAP RING - Ø30
215226	SPRING DOWEL PIN (6x20)
215231	SUBSET JAWS "SECURISTOP" - 526 - 600KG - Ø8.3mm
215235	SPRING DOWEL PIN (08,00x030)
215236	SOCKET SET SCREW (05x016)
215237	SOCKET SET SCREW (04x06)
215238	WIRE ROPE EXIT GUIDE "SECURISTOP" - 526
215239	LEVER SHAFT "SECURISTOP" - 526
215240	SPACER WITH WIRE ROPE PASSAGE
215247	SECONDARY BRAKE WIRE ROPE ENTRANCE LABEL - 1250lbs - 526
215248	PRIMARY WIRE ROBE ENTRANCE LABEL - 1250lbs - 526
215249	SOCKET SET SCREW (08x16)
215250	HEXAGONAL NUT M8 ZINC-PLATED.
215251	SPRING DOWEL PIN (08,00x030)
215252	WIRE ROPE ENTRANCE LABEL "SECURISTOP" - 1250lbs- Ø8.3mm
215253	SUBSET PRESSURE ROLLER 526A
215254	SUBSET JAWS 526 - 1250lbs - 8.3mm
215255	FOLDED BELT "SECURICHUTE" 526
215256	PROXIMITY SENSOR INDUC.- M12 - 4MM - 1NO - CABLE 2M
215258	SENSOR HOLDER "SECURICHUTE" 526
215303	SECONDARY WIRE ROPE GUIDE - Ø8.3 TO 9.5mm
215305	SUBSET TRIGGERING LEVER
215306	WIRE ROPE BALL BEARING AXLE "SECURICHUTE" 2200 LBS
215307	BALL BEARING 6201 2 RS
215308	REAR PLATE STICKER "SECURICHUTE"
215322	SUBSET LEVER "SECURISTOP" - 526 - 600kg - Ø8.3mm
215323	SUBSET SUPPORT "SECURISTOP" - 526
215324	FOLDED BELT "SECURISTOP" - 526
215325	UPPER SPACER "SECURISTOP" - 526
215326	WIRE ROPE EXIT GUIDE HOLDER "SECURISTOP" - 526
215327	FIXING BUSH "SECURISTOP" - 526
215328	WIRE ROPE GUIDING SPRING - Ø8.3 - GREEN - 526
215332	SECONDARY BRAKE OVERSPEED "SECURICHUTE" WITH SENSOR - 1250lbs - Ø 8.3
215435	HOUR METER 90-264VAC-50/60HZ
216018	SUBSET TOP LIMIT SWITCH STOP DISC
216027	SLEEVE FOR HOOK MOUNTING - 527
216029	CONNECTING BRACKET FOR HOOK - 6mm - 527
216039	SUBSET TELESCOPIC HANDLE
216040	CONNECTING BRACKET FOR HOOK - 10mm - 526
216075	SUBSET PENDANT CONTROL SHUNT "JUMPER" PLUG
216078	DIGITAL VOLTMETER
216080	BLACK RING FOR ELECTRICAL BOX COVER
216081	EMERGENCY PUSH BUTTON

216082	DOUBLE ILLUMINATED PUSHBUTTON
216083	DOUBLE BUTTON PROTECTION
216091	EMERGENCY STOP LABEL
216102	SUBSET TOP LIMIT SWITCH
216104	EMERGENCY DESCENT WARNING LABEL 527A
216105	OPERATOR AND HOIST STOP WARNING LABEL 527A
216108	ELECTRICAL HAZARD LABEL (32x32mm)
216132	ALUMINIUM HANDWHEEL - 527A
216133	SEALING SCREW FOR CONNECTOR
216136	STIRRUP BAR ADAPTER - 10mm - 526I
216168	HOIST LOAD PLATE e.LIFT 1000lbs - FR/EN - 526K
216181	SUBSET OVERLOAD SHUNT "JUMPER" PLUG
216183	CONNECTOR MALE 4 PINS RIGHT-ANGLED M12
216185	CONNECTOR 4 POLE FEMALE BASE
216186	FEMALE CONNECTOR M12 4 POLES 2M CABLE
216187	SUBSET COVER FOR ELECTRICAL BOX - 208V - 1PH - 526K
216188	SUBSET SUPPORT FOR CAPACITOR 100-125 µf
216189	TIME RELAY 24-240VAC/DC-50/60Hz
216190	FUSE - (05x20) - 2A
216191	INDICATOR - RED LIGHT 85-264V
216192	GEARBOX VF49 P I14 P80 B14 V6
216194	UPPER HOLDER FOR MOUNTING ELECTRIC MOTOR/BOX 526K
216195	SUBSET "SECURICHUTE" FIXING BRACKET 526K
216196	HOIST HANDWHEEL HOLDER 526I
216199	FIXING PLATE FOR CABLE PROTECTION SLEEVE
216200	STATOR FOR MOTOR BRAKE 190V-15Nm
216201	ELECTRIC MOTOR FAN
216202	BRAKE MOTOR 1.25KW 230V
216211	SUBSET 4 BUTTONS PENDANT CONTROL WITH SHUNT - 2.5m - 527A
241009	PINION SHAFT FIXING WASHER
241086	BALL BEARING 6005 DDU (25x47x12)
241200	ELASTIC SPRING WASHER
241202	START CAPACITOR 100µf 330V
241211	HEXAGONAL SCREW (08x35)
241259	EXTERNAL SNAP RING - Ø25
241265	SPRING DOWEL PIN (05x020)
241626	SOCKET HEAD CAP SCREW (08x045)
241720	BALL BEARING 6305 2 RS (25x62x17)
241764	PLASTIC CAP FOR FAN COVER BLACK
241764	NEW PLASTIC CAP FOR FAN COVER BLACK
241771	POSITION SWITCH
241773	POLYAMID ROD Ø6
241802	EMERGENCY DESCENT LABEL - 4 LANGUAGES
241806	KEY (8x7x45)
241814	MANUAL TRIGGERING "EMERGENCY STOP" LABEL

241925	MOTOR FAN COVER
241932	MANUAL BRAKE RELEASE LEVER
241937	BRAKE RECTIFIER
244076	CONTACTOR 100-250VCA 1NO
244087	CLIP FOR MOUNTING ON RAIL DIN TS35
244540	PIN CLIPS - Ø4.5 - ZINC PLATED
246627	HEXAGONAL SCREW (08x45)
340104	SELF LOCKING HOOK WITH SWIVEL 2.6T (4:1)
518502	SUBSET ROLLER - SECONDARY BRAKE SLACKROPE "SECURISTOP"
520099	SPRING WASHER (12.2x23x1.5)
520154	TRIGGERING LEVER SPRING
520219	CAPACITOR 30µf 400/450V
520220	CAPACITOR 20µf 400V
520241	EMERGENCY STOP RED STICKER
520304	FAN WASHER AZ10 GALVANISED
520334	COVER FOR 04-PIN CONNECTOR - M20 - IP65
520336	CABLE GLAND M20x1.5 Ø7-13MM
520820	BRAKE DISC PAD
520920	BRAKE LEVER COMPLETE - 10Nm
700695	GROWER WASHER W 8 GALVANISED
030045	HOOK SET 2.5T
030052	SUBSET OF TRANSPORT WHEELS & HANDLE - LIFTHO + MOTRIX (TYPE 526/527)

